



VTech InnoTab 2s Screen Replacement

This guide will allow you to gain access, remove and replace the screen on your tablet

Written By: Esthevan Romeiro



INTRODUCTION

By the end of this guide you should be able to access the screen on your tablet for removal or replacement.



TOOLS:

- [JIS Driver Set](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
 - [Spudger](#) (1)
 - [Soldering Station](#) (1)
 - [Heat Gun](#) (1)
-

Step 1 — Back Panel




- Turn your device to where the back panel is facing you.

Step 2




- Lift the Leg all the way up and twist the bottom to remove.
 - Once the bottom part pops out the whole leg should just come off.
 - Remove any game cartridge from the device.

Step 3

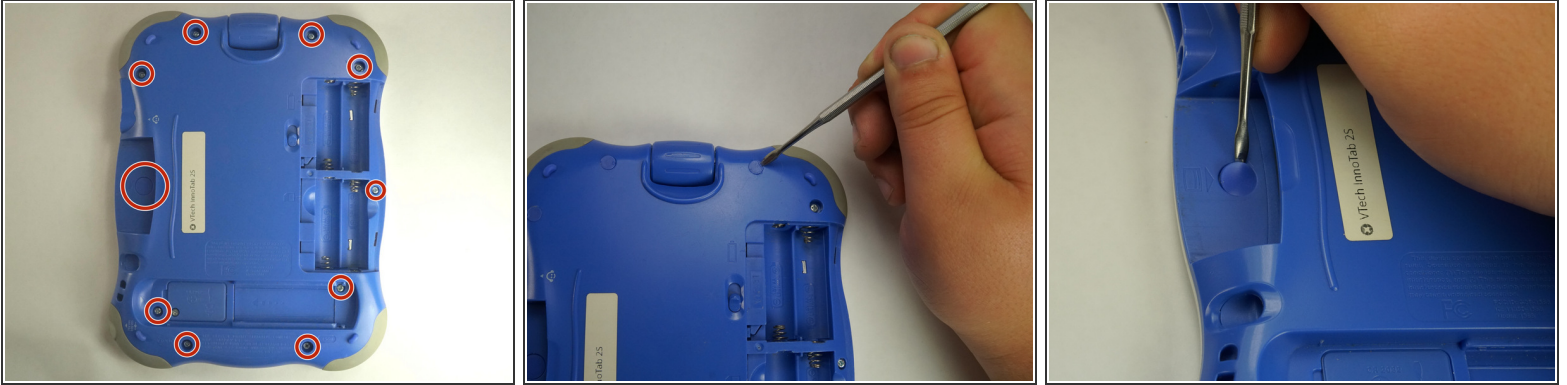


- Remove all of the plastic tabs on the device. These are covering screws that will need to be removed.
- ⚠ These covers are made of hard plastic so they may be difficult to remove.
- There is a special tab in the cartridge cover that is made of rubber, make sure to not break this tab.

Step 4

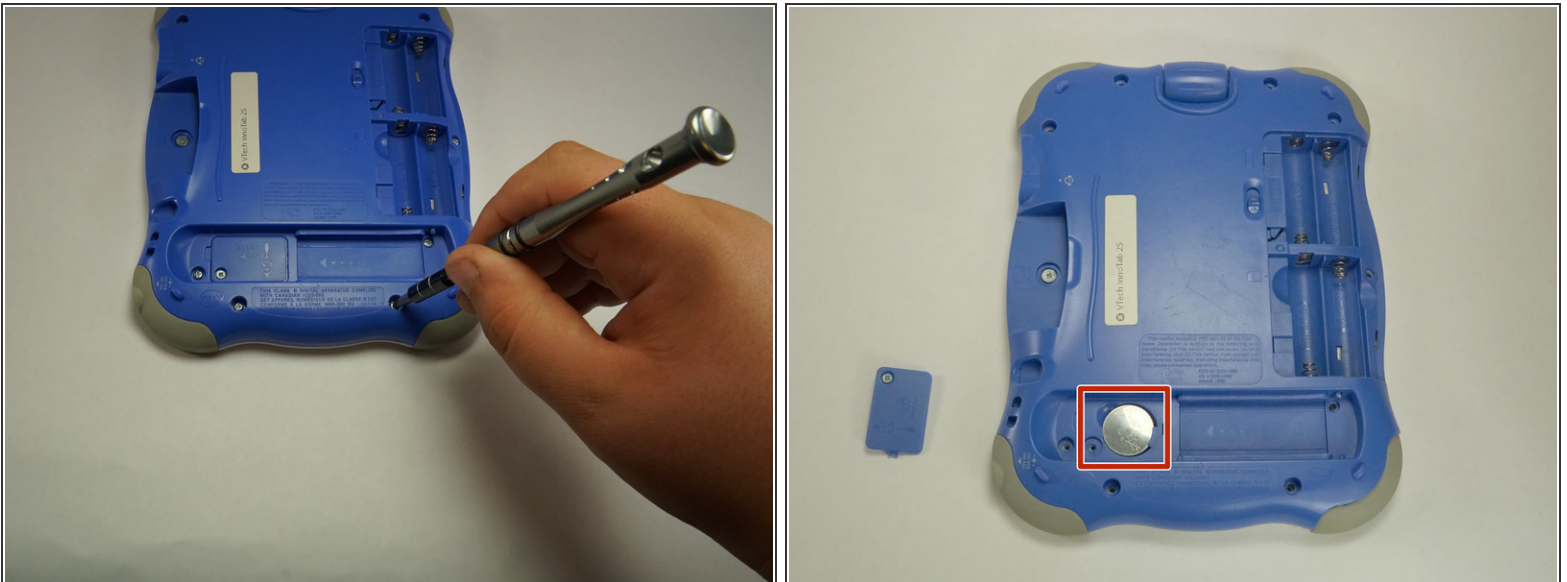


- Remove all nine screws from the back of the device using a J0 bit.
- Remove the small battery.

Step 5

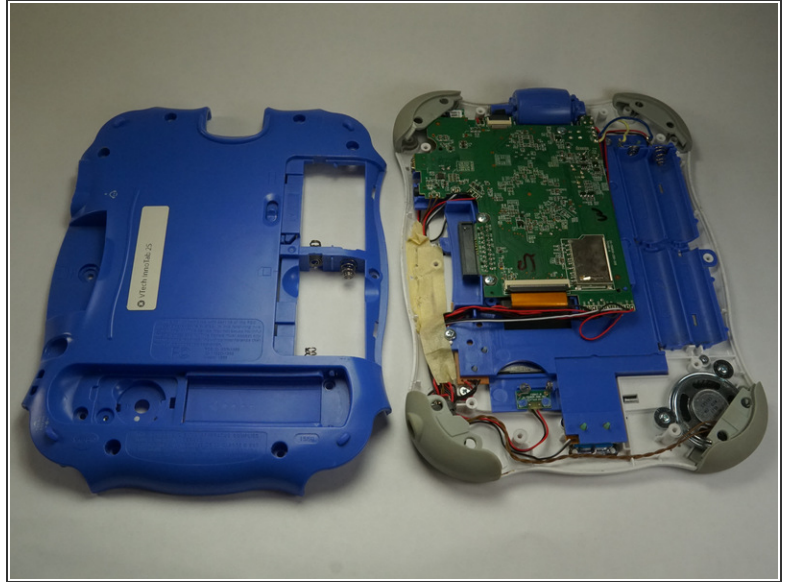


- Using a plastic opening tool, detach the backplate from the front piece.
 - ⚠ Do not use excessive force. Double check that you removed all the screws if the panel is not coming off easily.
- Once the backplate has been removed, you will have access to the circuit board.

Step 6 — Motherboard

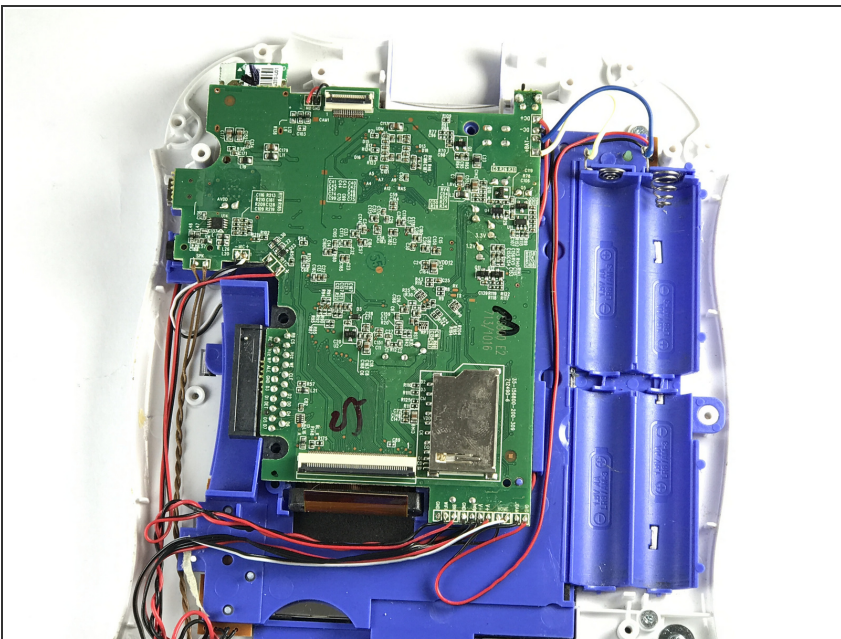


- First begin by removing the three cross-head screws using a J0 bit.

Step 7

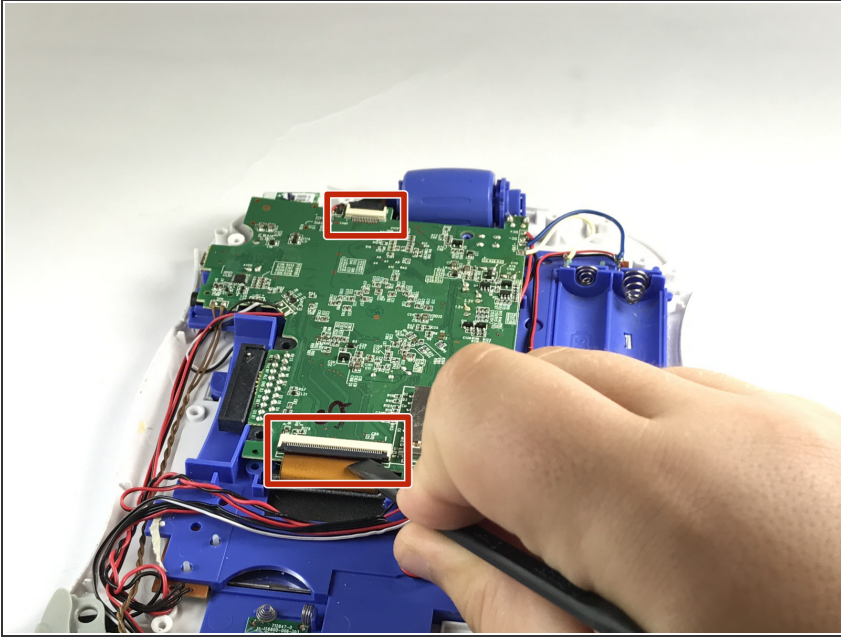


- First remove the ribbon cables. There are two highlighted by the red squares
- Do not apply too much pressure and make sure that the black plastic tabs are fully open before you pull the cable out.

Step 8

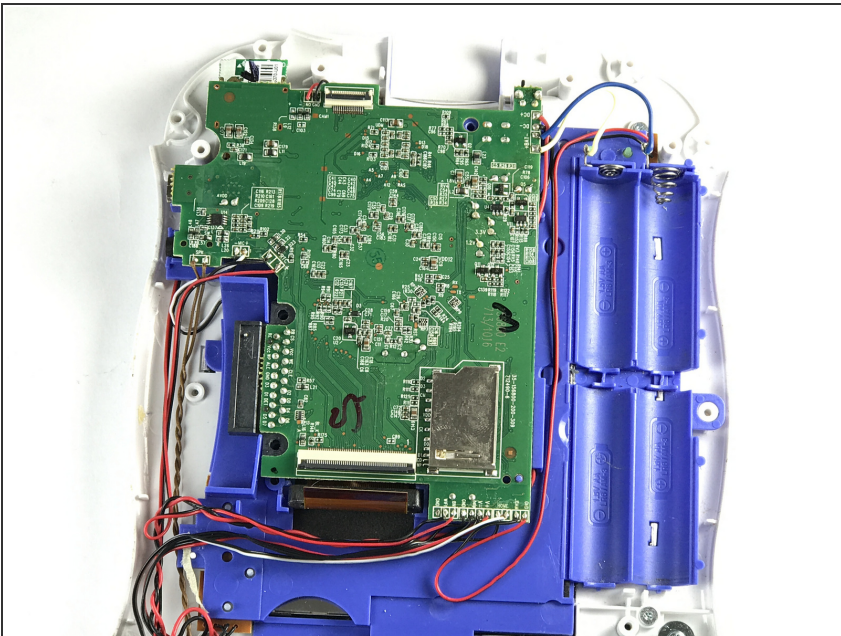


- Remove the camera from the assembly and put it in a safe place so that it will not get damaged.


Step 9

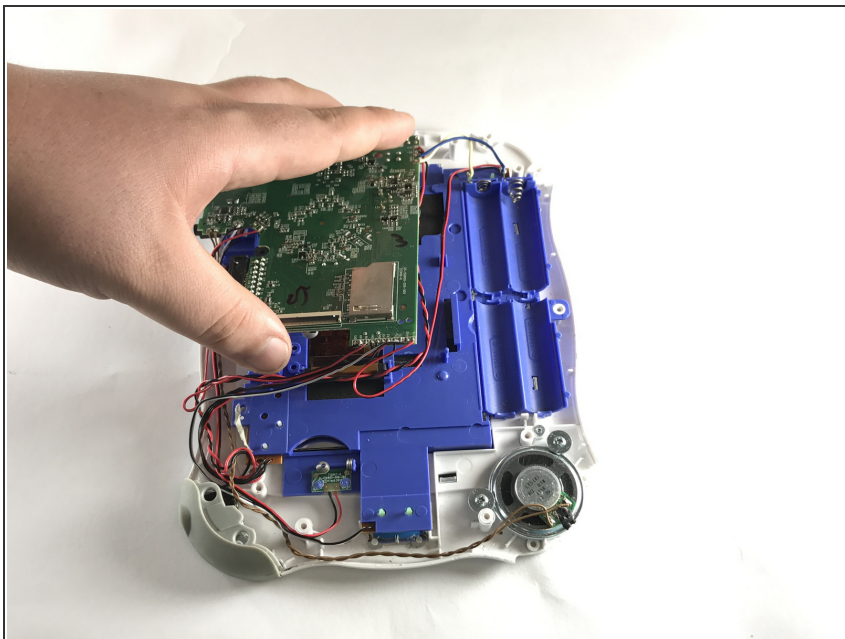



- Remove the board from the main assembly.
- Be careful not to pull too hard so that the cables aren't broken.

Step 10

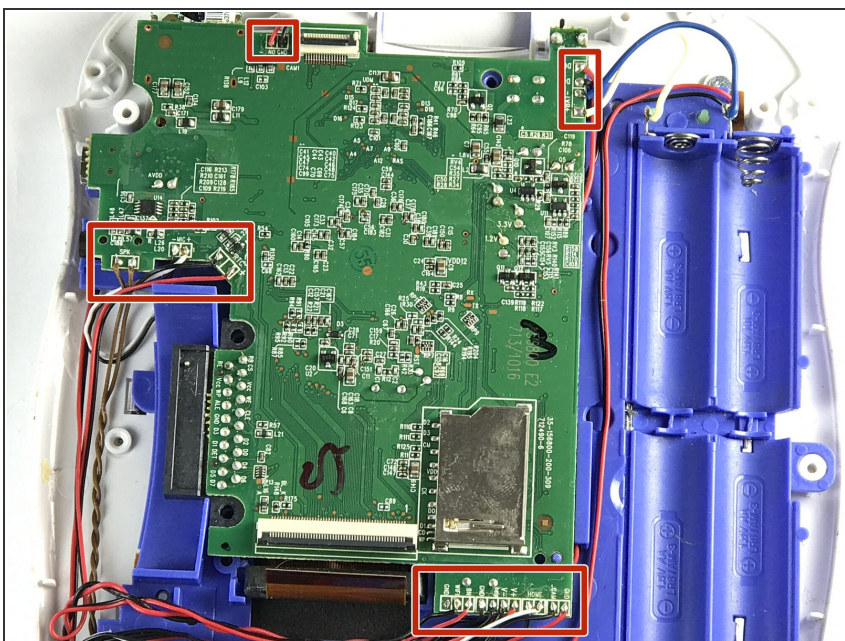


- De-solder the points shown to fully remove the cables and free the board.
-  A soldering guide offered by IFIXIT can be found here [Soldering Skills](#).

Step 11 — Screen

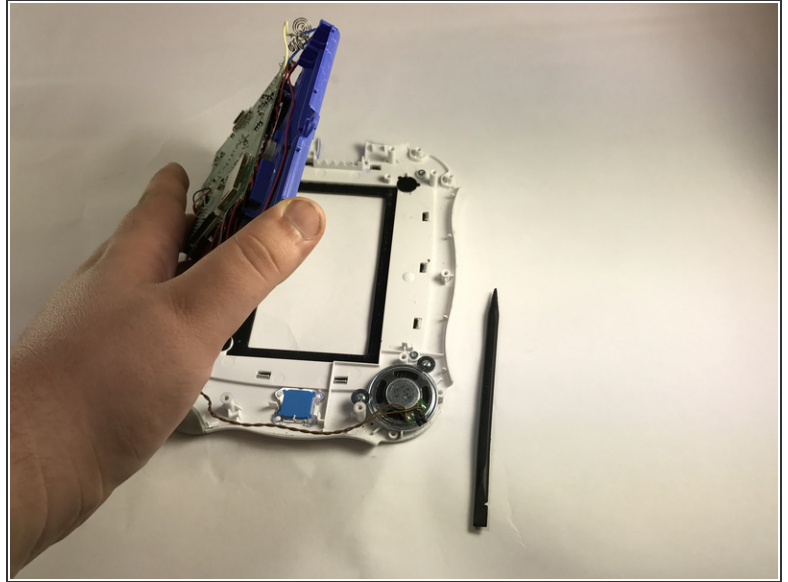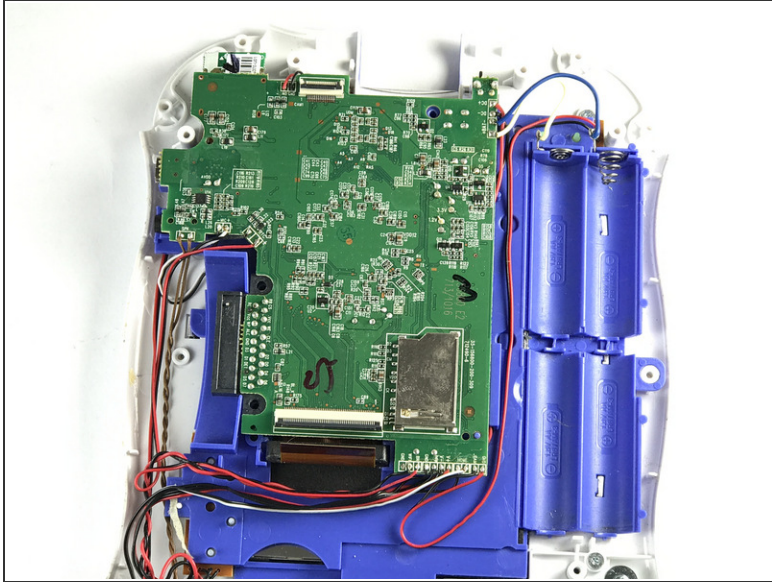

- After removing the back plate and screws, all screws have been removed to separate the circuit board and wires from the front panel.
- Remove the front panel from the device to expose the screen.

Step 12

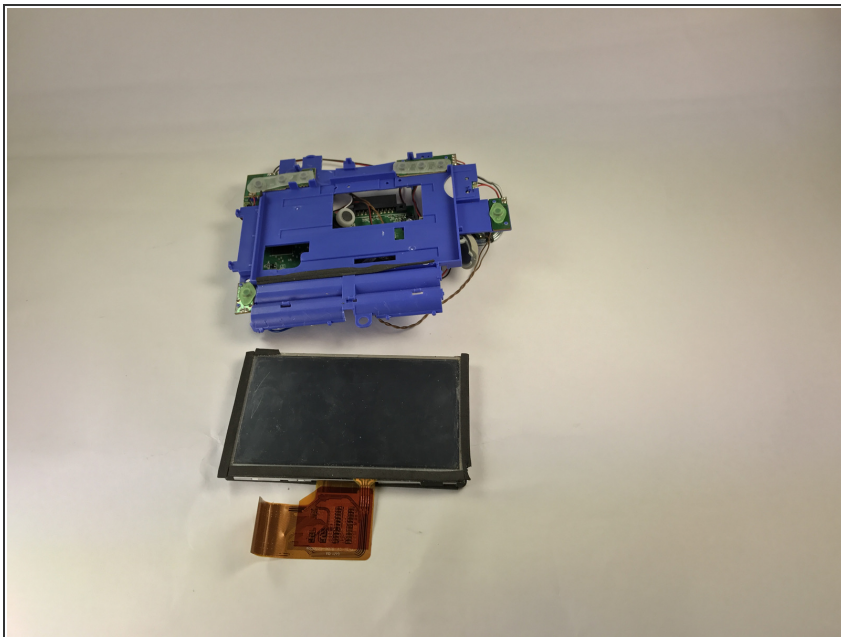

- Using a heat gun, heat the glue that holds the screen to the rest of the device.
- While heating, carefully pull screen from the device exposing the ribbon wire on the back of the screen, disconnect.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-30 02:49:47 AM.